





# When you place video call you can simply let the powerful TANDBERG ICM (Intelligent Call Management) set call-parameters automatically, Including: • the call type (Video, Audio/telephone), • the default call speed (Bandwidth), • the network to be used (ISDN or IP) and • (when 'dialing') whether or not the call must be Restricted from 64-to-56 Kbps, or you can adjust these by accessing the advanced Call Settings | Make a Call |

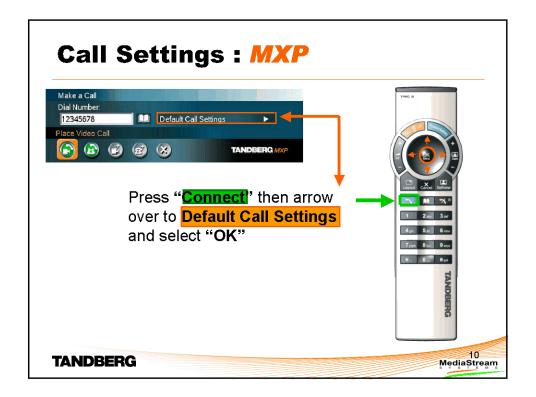


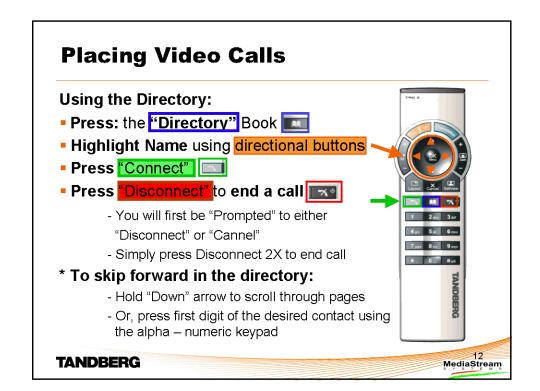


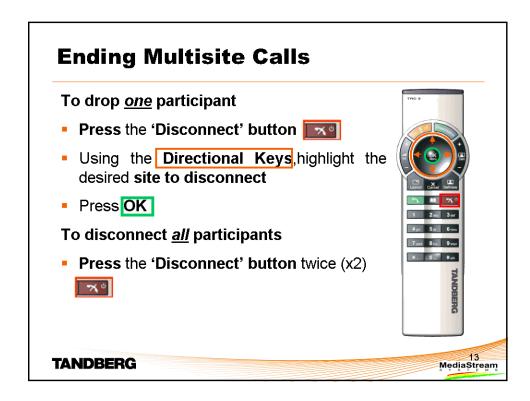




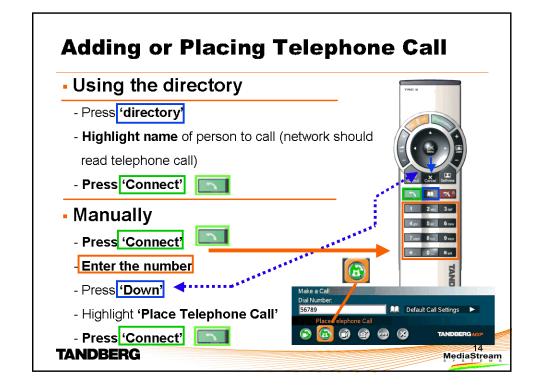

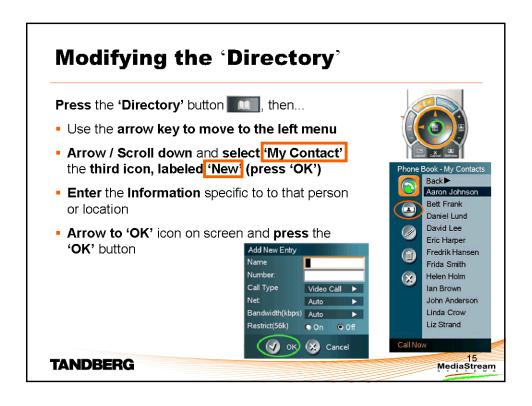

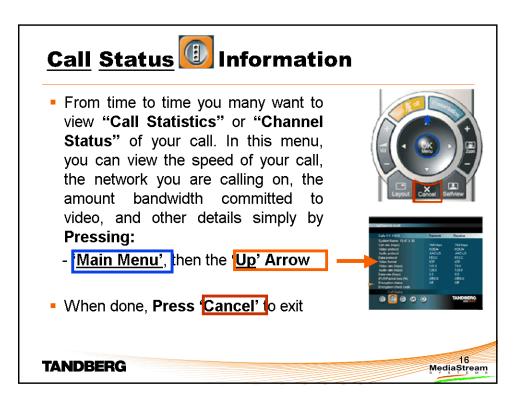

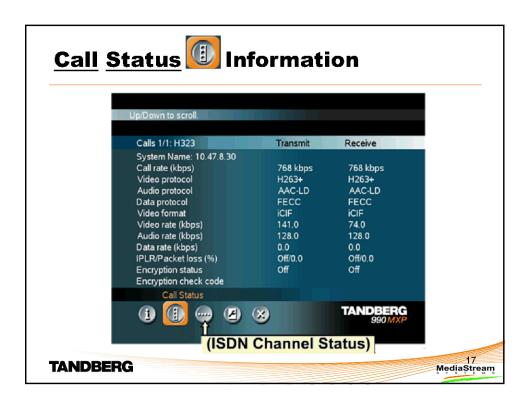






When you have the main camera selection us your video source on-screen:


- The directional arrows will allow you to move the camera
- The Zoom button allows you to zoom in and out on people or objects



**TANDBERG** 

18 MediaStream

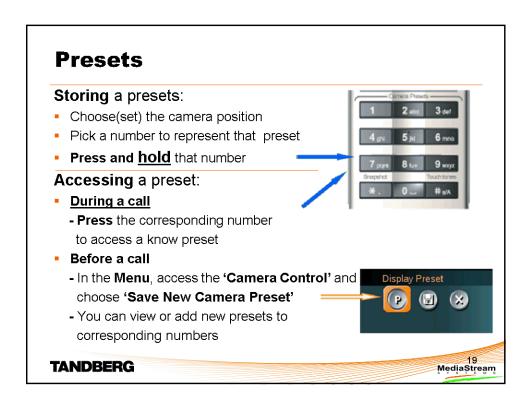

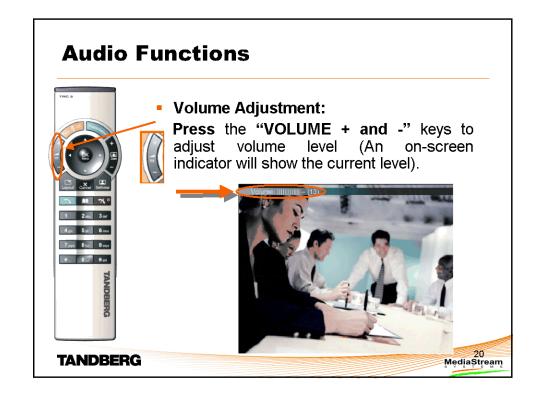



- Mute: To turn your microphone on/off during a call, <u>press</u> the "Mic Off" key. An on screen indicator will appear on both sides when the microphone is off.
- During a point-to-point call, far side will get a message "Microphone OFF at other side" whenever you "Mute"
- The 'Mic Off': symbol flashes when voice activity is detect in your room ....

this, then, also provide another another good way to test your microphone connectivity



**TANDBERG** 

# **Far End Camera Operation**

- " Far End Camera Control" gives you the ability to access the remote camera and video source.
- In the Main Menu, Choose the 'Move Camera' icon
- Select the 'Far End' option
  - Use corresponding keys to access far-end presets
  - Press 'Presentation' to access far-end video source

Press 'OK' when done to deactivate far-end control



# 'Self-view', 'Move PIP'




#### Self-view


- Toggles between seeing the remote image during a call, to viewing your local image
- Remote video will appear in a picture-in-picture on screen

#### Move Picture-In-Picture (Layout)

- toggle a self view picture to all four corners of the primary monitor and then turns it off
- \*Wide screen format will allow you to choose between side-by-side, Picture-out-of-Picture and full screen modes

**TANDBERG** 

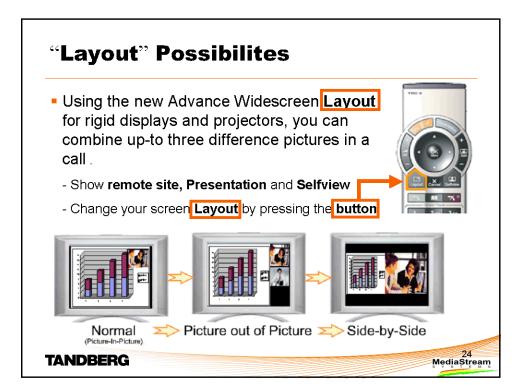

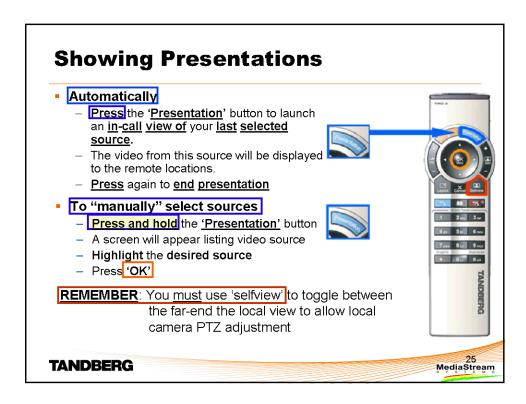

#### **Camera Preset**

# Save directly from the remote control:

- □ Move the camera to the desired position
- □ Press a number on the remote control for 1 second

#### Use preset directly from the remote control:

- □ Press a number on the remote control.
- ☐ The camera will move to the corresponding angle



#### **Picture Control**


# Go to Camera Control -> Picture Control in the Camera Control menu

- □ Focus
- □Camera Brightness
- □ White Balance



**TANDBERG** 

27

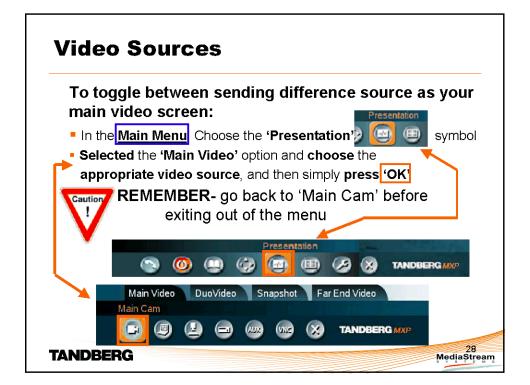

# **Receiving Inbound Calls**

- When receiving a call, systems are normally set to '<u>Auto-answer</u> + <u>Mic Off</u>'. The system will automatically accept the call and by default, "Mic Off" = your mic will be turn 'off' at the start in order to to better protect your privacy until wish to be "heard" by other
- If set to 'Manual-Answer' the system will prompt you to 'Accept' or 'Deny' the call; or can be set to 'Do not disturb'
  - Use the 'Directional Keys' to select your option and press 'OK'



! a c

(If you select "Deny", the caller will [probably] continue to attempt to make a connection with you. 'Do Not Disturb' will prevent any calls from ringing into your system by placing it in "busy" mode, and this can be cleared by pressing any key on the TANDBERG remote control)

**TANDBERG** 

29 MediaStream

# **Request Floor and Release Floor**

#### Release







- 1. Open the Menu by pressing OK.
- 2. Choose Conference Services and press OK.
- 3. Choose Request Floor and press OK. A Floor indicator will appear when you have floor.
- 4. When done, press the same button again, which now means Release Floor. The Floor indicator disappears.

#### **TANDBERG**



- \* Access by pressing 'Disconnect' when mot in a call
- Delay standby is used when you want to have your company logo present will not on a call
- Delay Standby for 3 Hours

  (b) (b) (c) (c) (d) (d)
- **Standby** will not activate when showing PC content while not in a call
- Standby is use while not in a call black out in monitors (VESA Monitor Power Management)
  - Do Not Disturb

    (b) (b) (c) (o) (x)
- Do Not Disturb is used when you do not any incoming calls "ringing-in" to your system

Can be use to show local-only presentations uninterrupted by calls form the outside.

('Do Not Disturb' will prevent any calls form ringing into your system by placing it in "busy" mode, and can be cleared by pressing any key on the remote or disconnecting your multisite call)

**TANDBERG** 

31 MędiaŞtream

Audio Demo

User Guide

TANDBERG MXF

#### "Text Chat"

Use the alpha-numeric keypad to type text messages / information:

- In the menu, go to 'Control Panel'
- Select the 'Text Chat' icon
- Enter text using the keypad
- Press 'OK' to close window
- Text is display on the <u>local</u> and <u>far-end</u> monitor (be careful what your type!!!)

Diagnostics

Administrator Settings Text Chat

(C) Restart

- For site participant can respond to your message
- One of several tools that can be use at an aid for hearing impaired

**TANDBERG** 

## To get Help...

At any time, you can always go form the main <u>menu</u> to **TANDBERG's <u>User Guide</u>** and select form variety of topics to get explanations and other 'How to' descriptions

- Access the menu, and go to 'Control Panel'
- Then choose 'User Guide'



**TANDBERG** 

33 MędiaŞtream

# ISDN and LAN settings menu

- Select Network from Administrator Settings menu
- The network menu contain :
  - ISDN-BRI settings
  - LAN settings
  - Network Profiles
  - Data Port



**TANDBERG** 

# **PC** Presenter<sup>TF</sup>

- Make presentations easy to hold
  - Connect the VGA-DVI cable to the PC Presenter (PC DVI-I in) connector on thecodec.
  - Connect the VGA-DVI cable to your PC (VGA Output).
  - Press the Presentation key.
  - Press the Presentation key again to end and go back to main camera.



**TANDBERG** 

35 MędiaStream

### PC SoftPresenterTF

- PC SoftPresenter is used to display PC images on your system
- The system and your PC must be connected to the same LAN.
- VNC server software must be installed on the PC.
  - Start the VNC software on your PC.
  - You must configure VNC Settings. Open VNC Settings in the Presentation Settings.
  - Enter a IP address and Password of your PC
  - Press Save

**TANDBERG** 

- If you choose VNC as video source, you will see your PC using VNC.



## **Virtual Network Computing**

#### VNC

- Able to access computers on the network (must have password)
- Can scroll through a power point without having an end user by using the left and right arrow buttons
- VNC software is downloaded from:
- www.realvnc.com



**TANDBERG** 

37 MędiaŞtream

# Adding Duo Video<sup>TF</sup>

#### Automatically


- "Presentation Start" in the Presentations Settings menu should be "Auto"
- Select Video Source from Presentation Source.
- And press OK or Presentation key to connect Duo Video.
- Press "Main Cam" when finished.


#### Manually

- Open the Start Presentation from the Presentation Menu.
- Select video source listed on the screen
- press OK
- When finished select Stop Presentation and press OK



**TANDBERG** 

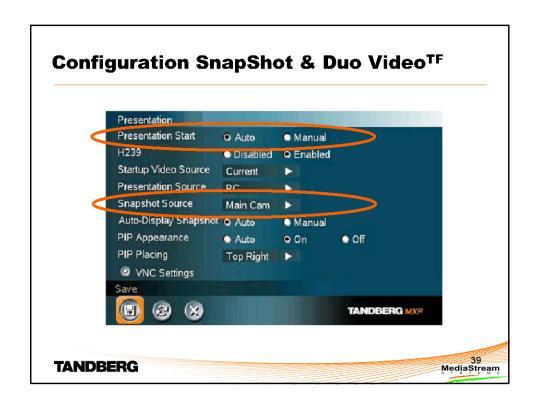

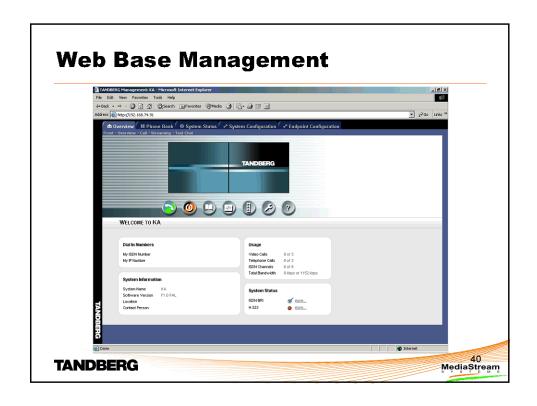

#### **Streaming**

#### Live videoconference on your PC

#### Start Streaming

- Open the Streaming menu from the Control Panel
- Press Start Streaming.
- Press Stop Streaming to end streaming.



#### View Streaming from a PC

- Start your Web browser and enter the IP-address of the streaming system.
- Click on Streaming.











**TANDBERG** 

41 MędiaŞtream

#### **Contact information:**

# MediaStream systems Co.,Ltd

51/3 Vibhavadi Tower 12B Fl. Ngam Wong Wan Road Ladyao, chatuchak, Bangkok 10900

Tel: 02-941-1530-2 Fax: 02-941-1001

ISDN: 02-941-4812-5

www.mstreamsystems.com

**TANDBERG**